

## SE613 Univerzální dálkový ovladač 300-868MHz

Ovladač umožňuje kopírovat většinu ovladačů s plovoucím kódem a pevnými kódy a frekvencí 300-868MHz. Umožňuje uložit 4 různé frekvence pevných nebo plovoucích kódů (4 tlačítka). Kdykoliv je možné generovat nový ovladač.

### Kopírování ovladačů s pevným a plovoucím kódem:

Všechny značky ovladačů které lze kopírovat jsou uvedeny v tabulce 3.0.

1. Stiskněte současně tlačítka 2 a 3 na 3 sekundy, LED dioda zhasne (cca na 1s) a poté se opět rozsvítí, uvolněte tlačítka. Vstoupili jste do učícího režimu (fig 1.).
2. Stiskněte 1x tlačítko 1 (fig 2).
3. Umístěte originální ovladač blízko ovladače se613 (co nejblíže 2-3cm) (fig 3)
4. Stiskněte tlačítko na originálním ovladači do té doby než ovladač se613 blikne. To znamená, že kód byl úspěšně uložen (fig 4).
5. Opakujte kroky pro zbývající tlačítka 2, 3 a 4 ovladače se613.

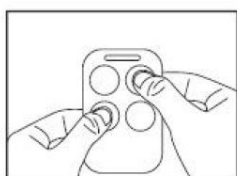


fig1



fig2

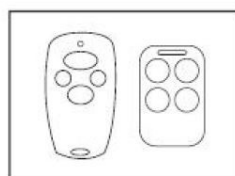


fig3

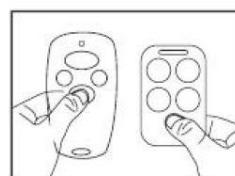


fig4

**Pozor: ovladače BFT, FAAC 433-868 SLH, KINGGATES, mají rozdílný postup učení:**

### BFT

1. Stiskněte současně tlačítka 2 a 3 na 3 sekundy, LED dioda zhasne (cca na 1s) a poté se opět rozsvítí, uvolněte tlačítka. Vstoupili jste do učícího režimu (fig 1).
2. Stiskněte 1x tlačítko 1 (fig 2).
3. Umístěte ovladač BFT blízko ovladače se613 (co nejblíže 1-3cm). Stiskněte tlačítko které chcete kopírovat na ovladači BFT do té doby než se ovladač se613 rozsvítí, uvolněte tlačítko (fig 3).
4. Stiskněte současně tlačítka 1 a 2 na ovladači BFT (nebo zadní tlačítko), než ovladač se613 blikne, uvolněte tlačítka. Opakujte kroky pro zbývající tlačítka 2, 3 a 4 ovladače se613.

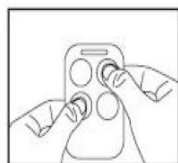


fig1



fig2



fig3

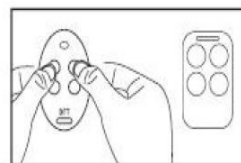


fig4


**FAAC 433-868 SLH (Originální ovladač FAAC musí být ovladač MASTER)**

Upozornění: ověřte že originální ovladač FAAC je MASTER ovladač.

Stisknutím jakéhokoliv tlačítka, LED dioda 2x blikne než se rozsvítí.


1. Stiskněte současně tlačítka 2 a 3 na 3 sekundy, LED dioda zhasne (cca na 1s) a poté se opět rozsvítí, uvolněte tlačítka. Vstoupili jste do učícího režimu (fig 1).

2. Stiskněte 1x tlačítko 1 (fig 2).
3. Umístěte ovladač FAAC blízko ovladače se613 (co nejbližší 1-3cm). Stiskněte tlačítko které chcete kopírovat na ovladači FAAC do té doby než se ovladač se613 rozsvítí (fig 3).
4. Stiskněte na ovladači FAAC tlačítko 1 a 2 na 2 sekundy, jakmile ovladač FAAC zabliká, uvolněte tlačítka. Poté stiskněte jakékoliv tlačítko na ovladači FAAC než ovladač se 613 blikne, což znamená že bylo kopírování úspěšné (fig 4). Opakujte kroky pro zbývající tlačítka 2, 3 a 4 ovladače se613.

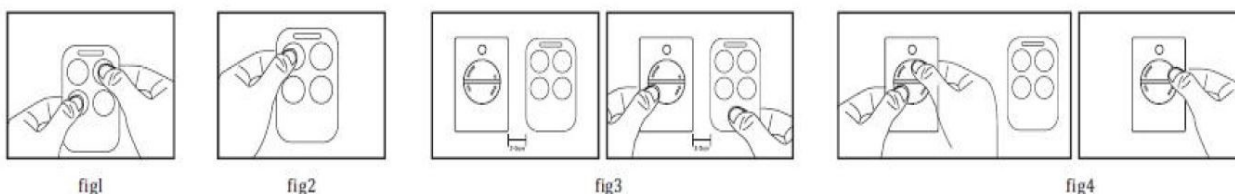

### KINGGATES

1. Stiskněte tlačítko 3 a přitom 5x stiskněte tlačítko 2. LED na se613 bude pomalu blikat (fig 1).
2. Umístěte ovladač Kinggates/Motorline blízko ovladače se613 (co nejbližší 1-3cm). Stiskněte tlačítko které chcete kopírovat na ovladači Kinggates/Motorline do té doby než LED na ovladači se613 zabliká, uvolněte tlačítka (fig 2).
3. Stiskněte tlačítko 1 na ovladači se613, LED se rozsvítí. To znamená, že učení bylo úspěšné (fig 3). Opakujte kroky pro zbývající tlačítka 2, 3 a 4 ovladače se613.

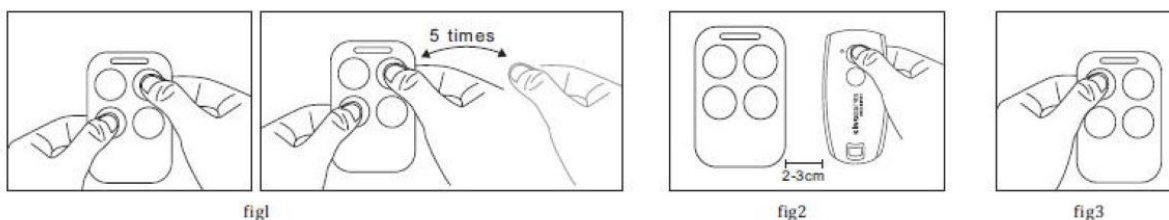

### Vzdálené programování:

**Prosím pamatujte, že všechny značky uvedené v tabulce 1 je nutné naučit k originálnímu přijímači**

Jděte do blízkosti přijímače a stiskněte na ovladač se613 současně tlačítko 1 a 3 na 3 sekundy, LED dioda zhasne (cca na 1s) a opět se rozsvítí, uvolněte tlačítka. Nyní jste vstoupili do funkce vzdáleného programování. Nyní stiskněte na ovladači se613 jakékoliv tlačítko, které jste již naučili a bude spuštěno vzdálené programování. Po 8 sekundách vyčkejte na aktivaci přijímače (otevření brány, vrat, atd.) Ovladač byl nyní uložen.

Upozornění: Pokud přijímač nereaguje, vzdálené programování není umožněno, ovladač musíte přiřadit manuálně. Pokud kopírujete ovladač s pevným kódem, není nutné po kopírování učit k přijímači.

**Tabulka 1.**

List 1	List 2
<b>ALLMATIC</b> B.RO OVER, B.RO 2WN, TECH3, MINIPASS, BRO.STAR <b>APRIMATIC</b> TR2/4, TM4 <b>BENINCA</b> TO.GO2 /4 VW, TO.GO2/4 QV, IO, T2/4 VW <b>BFT</b> MITTO 2/4M, MITTO 2/ 4A, MITTO RCB02/04, GHIBLI, KLEIO, TRC2/4, RB4 MURALE <b>CARDIN</b> S449 TRQ449100/TRQ449200/ TRQ449300/TRQ449400, TXQ449200/TXQ449300/ TXQ449400, S486:TRQ486200/ TRQ486400, TXQ486200/ TXQ486400 <b>DITEC</b> GOL4, BIXLP2/2 RED, BIXLG4 <b>FAAC</b> XT4 433 RC, TE4433H	<b>KING GATES</b> STYLO 4 <b>MHOUSE</b> TX4, TX3, GTX4 <b>NICE</b> SMILO2/4, FLO1/2/4R-S,VERY VR, FLO1R-S,FLO2R-S.FLO4R-S,FLO1RE/FLO2RE/FLO4RE <b>NOVOTECNICA</b> BIXL2 <b>O&amp;O</b> TWIN,TX2/TX4(NEO),T.COM R4-2/T.COMR4-4,T.COM R8-2/T.COM R8-4 <b>TAU</b> 250 SLIM RP,250 T4 RP <b>VDS</b> TRQ, ECO-R <b>V2</b>
<b>FADINI</b> JUBI SMALL, JUBI-2, JUBI-4 <b>GENIUS</b> BRAVO TE4433H, ECHO <b>GIBIDI</b> AU1680 WOOD, GIBIDI AU1610/1680, AU1810/1600, AU01590 AUO3000 DOMINO, DTC 4334	PHOENIX 433-868, TXC, TSC, TRC, HANDY <b>PUJOL</b> VARIO, MARTE <b>ADYX</b> BRAVO, TE4433H, TE4433H BLUE <b>PRASTEL</b> MPSTF2/F4RE, MPSTL-1E/2E/4E, MPSTP2E/2E BLUE, MT4E/2E, BFOR, TRQ4P, TC2E, TRQ2P <b>SOMFY</b> TELIS 1/ 4 RTS

#### **Funkce vytvoření nového ovladače:**

Pokud zakoupíte ovladač se613, ale originální ovladač je ztracen, můžete ovladač vytvořit jako nový originální.

1. Stiskněte společně 1. a 4. tlačítko na 3 sekundy, LED zhasne (cca na 1s) a znovu se rozsvítí, uvolněte tlačítka. Nyní jste vstoupili do režimu obnovení (fig 11).
2. Stiskněte tlačítko pro výběr značky dle tabulky 2. Např. pokud chcete vybrat BFT MITTO, stiskněte tlačítko 1 jedenkrát, LED 1x blikne.
3. Potvrzení značky. Stiskněte současně tlačítko 3 a 4. LED blikne, uvolněte tlačítka. Nyní ovladač funguje jako nový ovladač BFT MITTO (fig 2).

Poznámka: Pokud obnovujete se613 jako 4-tlačítkový ovladač FAAC, obnovte jako 2-tlačítkový BFT a poté tlačítko 1 a 2 bude mít kód BFT a 3 a 4 tlačítko kód FAAC.

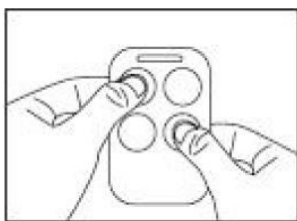


fig1

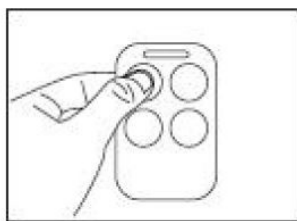


fig2

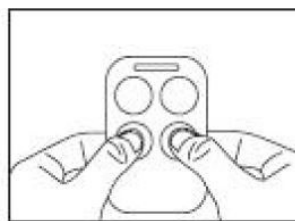


fig3

Ovladač	Stisk 1x	Stisk 2x	Stisk 3x	Stisk 4x	Stisk 5x	Stisk 6x
1. Tlačítko	BFT MITTO	BENINCA cupido	NICE SMILO	NICEFLOR-S	Motorline	
2. Tlačítko	FAAC XT4 433 SLH	CAME TOP-432NA	DITEC DOL4C	GLIDEROL 315	SLAVE	
3. Tlačítko	SUPERLIFT	NOVA	V2 PHOENIX2	DOORHAN TRANSMITTER 4	KINGGATES	
4. Tlačítko	BOSS BHT4	ATA PTX4	SOMMER 4020 868MHZ	ROGER		Merlin 2.0+

**VAROVÁNÍ:** Tento výrobek není dětská hračka, uložte jej mimo dosah dětí, stejně tak i obalový materiál.

Výrobce/dovozce: Stualarm import, s.r.o. Na Křivce 30, Praha 10





Tabulka všech značek, které lze naučit:

BRAND	MODEL NO.	FUNCTION			
ADYX	BRAVO.TE4433H,TE4433H BLUE	Need to activate the receiver	FAAC	XT2/XT4 433 SLH, XT2/XT4 868 SLH, XT2/XT4 433 SLH LR, XT2/XT4 868 SLH LR, T2/T4 433 SLH, T2/ T4 868 SLH, TML2/TML4 433 SLH, TML2/TML4 868 SLH, DL2/DL4 868 SLH.	Remotely program function
ALLMATIC	B.RO OVER, B.RO 2WN, TECH3, MINIPASS, BRO.STAR	Remotely program function			
ALUTECH		Need to activate the receiver			
APERTO (SOMMER)	TX02-434-2, TX02-868-2 BLUE, 4025 TX02-868-2, 4022 TX02434-2, 4020 TX-03-868-4, 4013 TX03-434-4	Need to activate the receiver			
APRIMATIC	TR2/TR4, TM4	Remotely program function	FADINI	JUBI SMALL, JUBI-2, JUBI-4	Remotely program function
ATA	PTX4 BLUE/PTX 4 PINK	Need to activate the receiver	GENIE	GITR-3,GIT,GICT390,GIFT390-1,G3 T-BX,G1T-BX,GM3T,G1CTD,GIFTD	Need to activate the receiver
BALLAN	FM404B,4013	Need to activate the receiver	GENIUS	BRAVO TE4433H, ECHO	Remotely program function
BENINCA	TO.GO2 VW/TO.GO4 VW, TO.GO2 QV, TO.GO4 QV, IO, T2 VW/TO.GO4 VW, APPLE, LOT2WCV	Remotely program function	GENIUS	JA332 AMIGO 2 868,JA334 AMIGO 4, AMIGOLD 2/AMIGOLD 4, KILO 2/KILO 4 433 JLC, KILO2/KILO4 868 JLC	Need to activate the receiver
BFT	MITTO 2M/MITTO4M, MITTO 2A/ MITTO 4A, MITTO RCB02/MITTORCB04, GIBILI, KLEJO, TRC2/ TRC4, RB4 MURALE	Remotely program function	GIBIDI	AU1680 WOOD, GIBIDI AU1610, GIBIDI AU1680, AU1810, AU1600,AU01590 AU03000 DOMINO, DTC 4334	Remotely program function
BOSS	BHT4	Note! Fixed Code Match Receiver directly	GLIDEROL	315MHZ	Need to activate the receiver
CAME	TAM 432 SA, TOP 432 NA/TOP 434 NA, TOP 432 SD, TOP 432 EV/TOP 434 EV	Note! Fixed Code Match Receiver directly	HORMANN	HSM4 868MHZ,HSE2-868-BS,HS 4 BS	Note! Fixed Code Match Receiver directly
CARDIN	S449 TRQ449100/TRQ449200/ TRQ449300/TRQ449400, TXQ449200/TXQ449300/ TXQ449400, S486:TRQ486200 TRQ486400, TXQ486200/ TXQ486400	Remotely program function	KEY	900TXB - 42R, SUB44, TXB-44R, TXG-44R	Need to activate the receiver
CHAMBERLAIN/LI FTMASTER/MOTORLIFT	9433SE, 4333E, 4335E, 94334E, 4333EML, 4335EML, 84334EML, 4335EML	Need to activate the receiver	KING GATES	STYLO 4	Need to activate the receiver
CLEMSA	MUTANCODE.MASTERCODE MV	Note! Fixed Code Match Receiver directly	LABEL	SPYCO	Need to activate the receiver
DEA	TR2 /4 MIO,GENIE R, TS2/4 MIO 868/ 868	Need to activate the receiver	LINEAR	MCT-11,ACT-21,ACT-22,STINGRAY ACT-31,STING RAY ACT-34B	Need to activate the receiver
DASPI	ZERO 2 RC/ZERO4 RC	Need to activate the receiver	MHOUSE	TX4, TX3, GTX4	Remotely program function
DITEC	GOL4, BIXLP2/2 RED, BIXLG4	Remotely program function	MERLIN + 2.0	E945M, E943M, E940M, E940M	Need to activate the receiver
DOORHAN	TRANSMITTER 4	Need to activate the receiver	MERLIN/PROLIFT	M230T(PROLIFT),M430R(PROLIFT)	Need to activate the receiver
ECOSTAR	RSE,RSC,RSZ	Need to activate the receiver	MERLIN	M842, M832, M844, C945, C940, C943	Need to activate the receiver
FAAC	XT4 433 RC, TE4433H	Remotely program function	MOOVO	MT4	Remotely program function
			MOTORLINE		Need to activate the receiver
			NICE	ONE:ON1/ON2/ON4/ON9,ONE ERA:ON1E/ON2E/ON4E/ON9E, INT11, INT12	Remotely program function
			NICE	SMILO2/SMILO4, FLO1R-S, FLO2RS,FLO4R-S, VERY VR, FLO1RE/	Remotely program function

	FLO2RE/FLO4RE	
NOVOFERM	NOVOTRON 502-504-512MIX43-2,MTR40-2,MC HS43-2,MHS43(2-4),MSHS433(2-4)	Need to activate the receiver
NOVOTECNICA	BIXL2	Need to activate the receiver
NOVA		Need to activate the receiver
O&O	TWIN,TX2/TX4(NEO), T.COM R4-2/TCOM R4-4.T.COM R8-2/T.COM R8-4	Remotely program function
PECCININ	TX MENBRANA	Need to activate the receiver
PRASTEL	MPSTF2/F4RE, MPSTL-1E/2E/4E, MPSTP2E/2E BLUE, MT4E/2E, BFOR, TRQ4P, TC2E, TRQ2P	Remotely program function
PROEM	ER2C4ACS/ER4C4ACS	Need to activate the receiver
PUJOL	VARIO, MARTE	Need to activate the receiver
PROTECO		Note! Fixed Code Match Receiver directly
RIB	LITHIO	Note! Fixed Code Match Receiver directly
Rossi		Need to activate the receiver
SEA	HEAD,SMART DUAL ROLL,SMART-3 ROLLING CODE,COCCINELLA ROLL	Need to activate the receiver
SEAV	BE-HAPPY-RS1, BE-HAPPY-RS2, BE-HAPPY RS3, BE-SMART RSX, BE-HAPPY RH1, BE-HAPPY RH2, BE-HAPPY RH3	Need to activate the receiver
SLAVE		Need to activate the receiver
SIMINOR	S433-4T/S433.4T SIMINOR 433-NLT2/433-NLT4	Need to activate the receiver
SUPERLIFT		Need to activate the receiver
SOMFY	TELIS 1/ 4 RTS	Need to activate the receiver
SOMFY	KEYTIS 2/ 4 NS,KEYGO 4 RTS,SOMFY 433-NLT4 BEIGE, SOMFY 433-NLT2 RTR, SOMFY TX2 433MHZ	Need to activate the receiver



SOMMER	4014 TX03-434-2, 4013 TX02-434-4, 4022 TX03-434-2, 4026 TX03-868-2, 4020 TX03-868-4, 4025-TX02868.4011, 4010	Need to activate the receiver
STAGNOLI	AV223	Need to activate the receiver
TAU	250 SLIM RP, 250 T4 RP	Remotely program function
TELCOMA	FM402, FM402 E	Need to activate the receiver
VD\$	TRQ, ECO-R	Remotely program function
V2	PHOENIX 433-868, TXC, TSC, TRC, HANDY	Remotely program function
BRAND	MODLE NO.	FUNCTION
ADYX	BRAVO.TE4433H, TE4433H BLUE	Need to activate the receiver
ALLMATIC	B.RO OVER, B.RO 2WN, TECH3, MINIPASS, BRO.STAR	Remotely program function
ALUTECH		Need to activate the receiver
APERTO (SOMMER)	TX02-434-2, TX02-868-2 BLUE, 4025 TX02-868-2, 4022 TX02434-2, 4020 TX-03-868-4, 4013 TX03-434-4	Need to activate the receiver
APRIMATIC	TR2/TR4, TM4	Remotely program function
ATA	PTX4 BLUE/PTX 4 PINK	Need to activate the receiver
BALLAN	FM404B, 4013	Need to activate the receiver
BENINCA	TO.GO2 VW/TO.GO4 VW, TO.GO2 QV, TO.GO4 QV, IO, T2 VW/TO.GO4 VW, APPLE, LOT2WCV	Remotely program function
BFT	MITTO 2M/MITTO4M, MITTO 2A/ MITTO 4A, MITTO RCB02/MITTORCB04, GIBLI, KLEIO, TRC2/ TRC4, RB4 MURALE	Remotely program function
BOSS	BHT4	Note! Fixed Code Match Receiver directly
CAME	TAM 432 SA, TOP 432 NA/TOP 434 NA, TOP 432 SD, TOP 432 EV/TOP 434 EV	Note! Fixed Code Match Receiver directly
CARDIN	S449 TRQ449100/TRQ449200/ TRQ449300/TRQ449400, TXQ449200/TXQ449300/ TXQ449400, S486:TRQ486200 TRQ486400, TXQ486200/ TXQ486400	Remotely program function
CHAMBERLAIN/LIFTMASTER/MOTORLIFT	94335E, 4333E, 4335E, 94334E, 4333EML, 4335EML, 84334EML, 4335EML	Need to activate the receiver
CLEMSA	MUTANCODE.MASTERCODE MV	Note! Fixed Code Match Receiver directly
DEA	TR2 /4 MIO, GENIE R, TS2/4 MIO 868/ 868	Need to activate the receiver
DASPI	ZERO 2 RC/ZERO4 RC	Need to activate the receiver
DITEC	GOL4, BDXLP2/2 RED, BIXLG4	Remotely program function
DOORHAN	TRANSMITTER 4	Need to activate the receiver
ECOSTAR	RSE, RSC, RSZ	Need to activate the receiver
FAAC	XT4 433 RC, TE4433H	Remotely program function

FAAC	XT2/XT4 433 SLH, XT2/XT4 868 SLH, XT2/XT4 433 SLH LR, XT2/XT4 868 SLH LR, T2/T4 433 SLH, T2/ T4 868 SLH, TML2/TML4 433 SLH, TML2/TML4 868 SLH, DL2/DL4 868 SLH.	Remotely program function
FADINI	JUBI SMALL, JUBI-2, JUBI-4	Remotely program function
GENIE	G1TR-3,GIT,GICT390,GIFT390-1,G3T-BX,G1T-B X,GM3T,G1CTD,GIFTD	Need to activate the receiver
GENIUS	BRAVO TE4433H, ECHO	Remotely program function
GENIUS	JA332 AMIGO 2 868,JA334 AMIGO 4, AMIGOLD 2/AMIGOLD 4, KILO 2/KILO 4 433 JLC, KILO2/KILO4 868 JLC	Need to activate the receiver
GIBIDI	AU1680 WOOD, GIBIDI AU1610, GIBIDI AU1680, AU1810, AU1600,AU01590 AU03000 DOMINO, DTC 4334	Remotely program function
GLIDEROL	315MHZ	Need to activate the receiver
KEY	900TXB - 42R, SUB44, TXB-44R, TXG-44R	Need to activate the receiver
KING GATES	STYLO 4	Need to activate the receiver
LABEL	SPYCO	Need to activate the receiver
LINEAR	MCT-11,ACT-21,ACT-22,STINGRAY ACT-31,STING RAY ACT-34B	Need to activate the receiver
MHOUSE	TX4, TX3, GTX4	Remotely program function
MERLIN + 2.0	E945M, E943M, E940M, E940M	Need to activate the receiver
MERLINPROLIFT	M230T(PROLIFT),M430R(PROLIFT)	Need to activate the receiver
MERLIN	M842, M832, M844, C945, C940, C943	Need to activate the receiver
MOOVO	MT4	Remotely program function
MOTORLINE		Need to activate the receiver
NICE	ONE:ON1/ON2/ON4/ON9,ONE ERA:ON1E/ON2E/ON4E/ON9E, INTI1, INTI2	Remotely program function
NICE	SMILO2/SMILO4, FLO1R-S, FLO2RS,FLO4R-S, VERY VR, FLO1RE/ FLO2RE/FLO4RE	Remotely program function
NOVOFERM	NOVOTRON 502-504-512MIX43-2,MTR40-2,MCHS43-2,MHS 43(2-4),MSHS433(2-4)	Need to activate the receiver
NOVOTECNICA	BIXL2	Need to activate the receiver
NOVA		Need to activate the receiver
O&O	TWIN,TX2/TX4(NEO), T.COM R4-2/T.COM R4-4.T.COM R8-2/T.COM R8-4	Remotely program function
Pecclini	TX MENBRANA	Need to activate the receiver
PRASTEL	MPSTF2/F4RE, MPSTL-1E/2E/4E, MPSTP2E/2E BLUE, MT4E/2E, BFOR, TRQ4P, TC2E, TRQ2P	Remotely program function
PROEM	ER2C4ACS/ER4C4ACS	Need to activate the receiver
PUJOL	VARIO, MARTE	Need to activate the receiver
PROTECO		Note! Fixed Code Match Receiver directly
RIB	LITHIO	Note! Fixed Code Match Receiver directly
Rossi		Need to activate the receiver
SEA	HEAD,SMART DUAL ROLL,SMART-3 ROLLING CODE,COCCINELLA ROLL	Need to activate the receiver
SEAV	BE-HAPPY-RS1, BE-HAPPY-RS2, BE-HAPPY RS3, BE-SMART RSX, BE-HAPPY RH1, BE-HAPPY RH2, BE-HAPPY RH3	Need to activate the receiver
SLAVE		Need to activate the receiver
SIMINOR	S433-4T/S433.4T SIMINOR 433-NLT2/433-NLT4	Need to activate the receiver
SUPERLIFT		Need to activate the receiver
SOMFY	TELIS 1/ 4 RTS	Need to activate the receiver
SOMFY	KEYTIS 2/ 4 NS,KEYGO 4 RTS,SOMFY 433-NLT4 BEIGE, SOMFY 433-NLT2 RTR, SOMFY TX2 433MHZ	Need to activate the receiver
SOMMER	4014 TX03-434-2, 4013 TX02-434-4, 4022 TX03-434-2, 4026 TX03-868-2, 4020 TX03-868-4, 4025-TX02868.4011, 4010	Need to activate the receiver
STAGNOLI	AV223	Need to activate the receiver
TAU	250 SLIM RP,250 T4 RP	Remotely program function
TELCOMA	FM402,FM402 E	Need to activate the receiver
VDS	TRQ,ECO-R	Remotely program function
V2	PHOENIX 433-868, TXC, TSC, TRC,HANDY	Remotely program function