



CONNECTION DIAGRAM V2.0

Model NO. : VI-FR-189C3

NOTE! Please DO NOT stick on the metal part

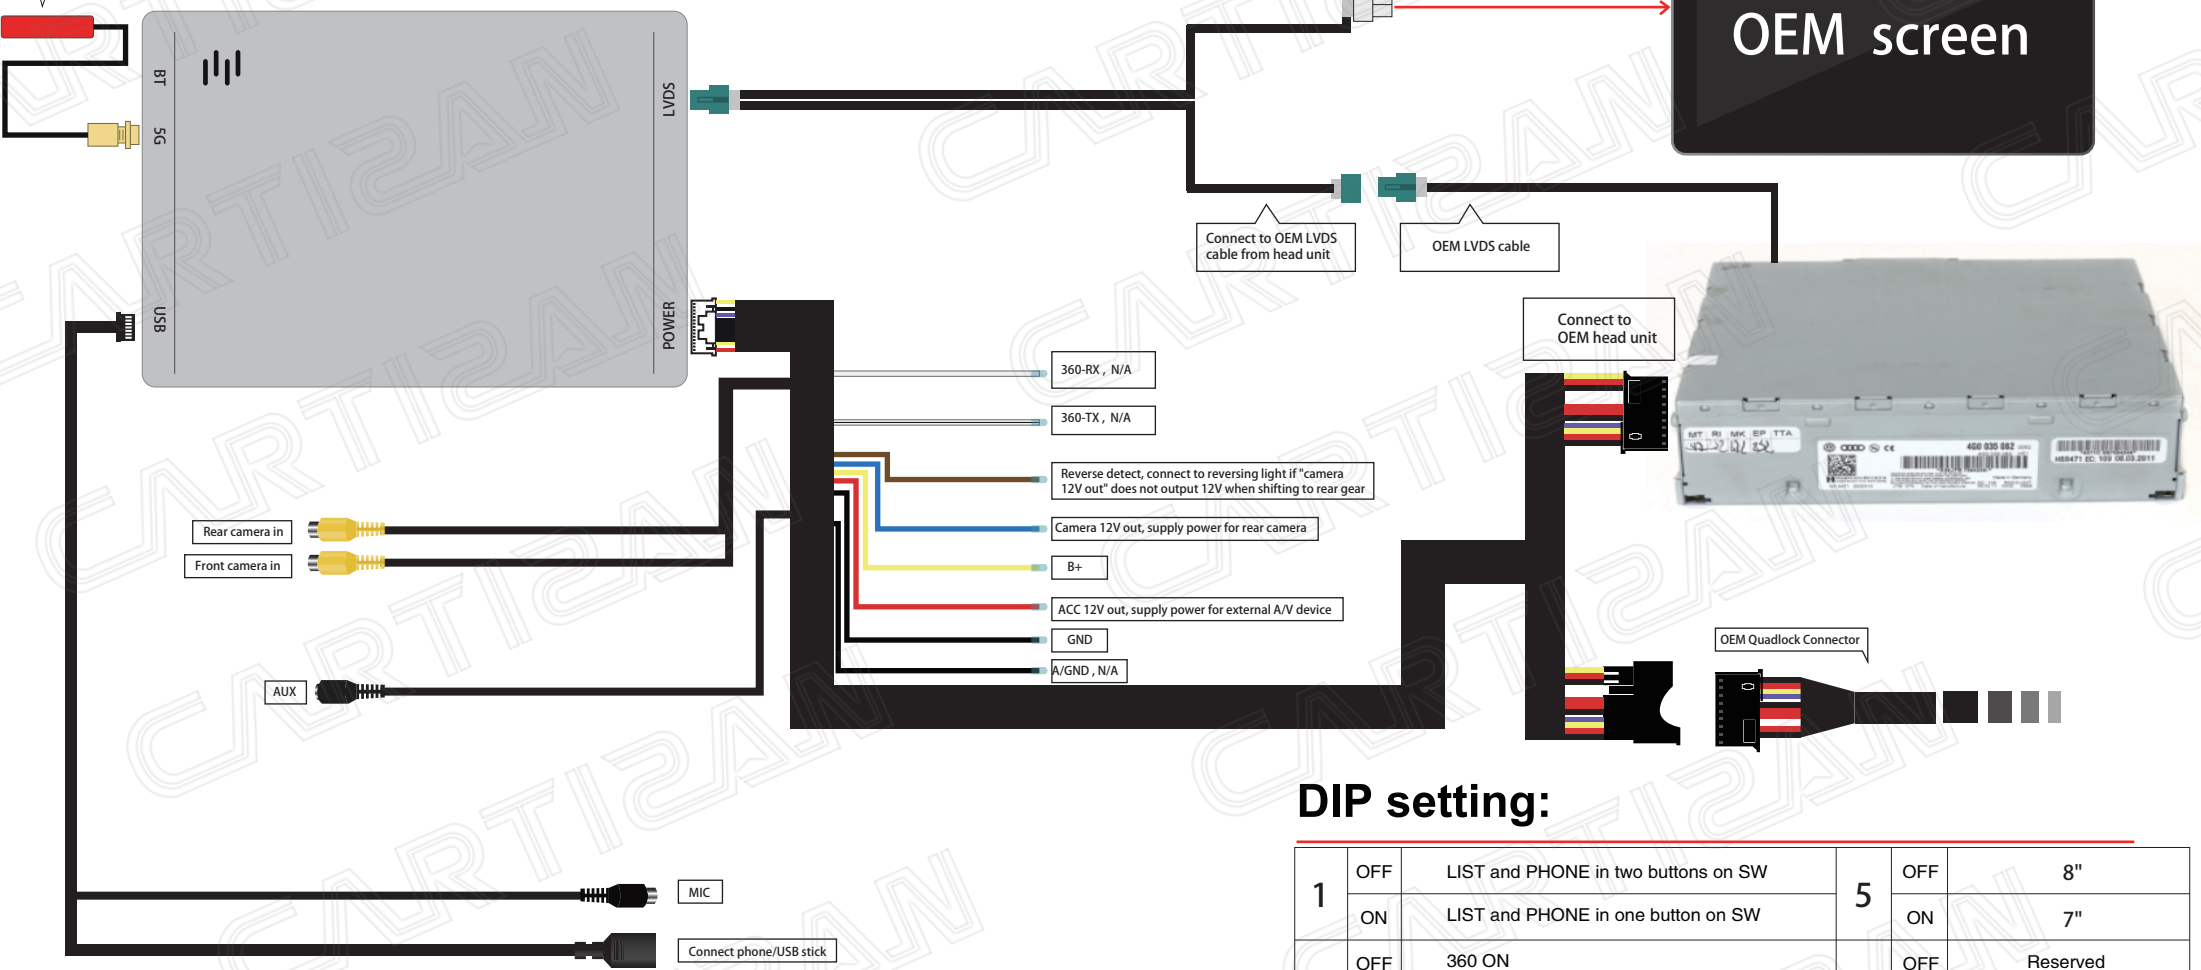

How to switch

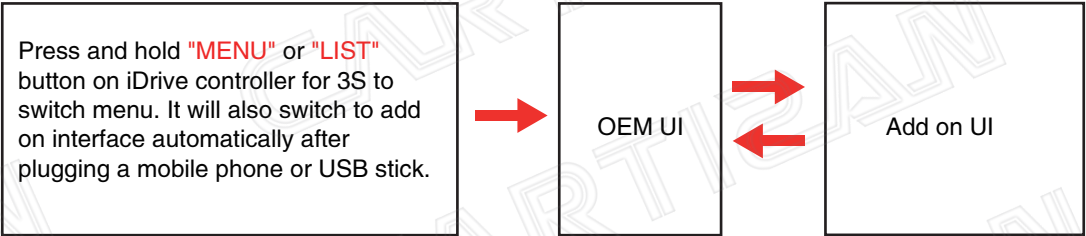

DIP setting:

1	OFF	LIST and PHONE in two buttons on SW	5	OFF	8"
	ON	LIST and PHONE in one button on SW		ON	7"
2	OFF	360 ON	6	OFF	Reserved
	ON	360 OFF		ON	Reserved
3	OFF	VGA	7	OFF	Add on rear camera
	ON	CVBS		ON	OEM rear camera
4	OFF	Front Camera OFF	8	OFF	OEM microphone
	ON	Front Camera ON		ON	Add on microphone

NOTE! Please try another car model DIP settings if your current car model DIP doesn't work. Disconnect and reconnect interface's power for effective after changing any DIP setting.